



## THANKS FOR PURCHASING PROBLEM SOLVERS THRU-AXLE TO QUICK-RELEASE FRONT HUB ADAPTER!

We're always looking to provide the products that allow you to configure your bike any way you want. So if you want to roll your current 12 or 15 mm thru-axle front wheel on your older quick-release fork, you've chosen the right product.


**⚠ WARNING:** CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

### COMPATIBILITY & INTENDED USE

Problem Solvers Thru-Axle to QR Front Hub Adapter allows you to use your 12 or 15 x 100 mm front thru-axle hub in a quick-release dropout fork.

**⚠ WARNING:** For 100 mm front hub only.

**⚠ WARNING:** See fork manufacturer and hub/wheel instructions to ensure compatibility.

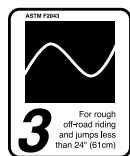

Intended for ASTM 3 condition. This is a set of conditions for the operation of a bicycle on a regular paved surface, unpaved and gravel roads and trails with moderate grades with irregular terrain where loss of tire contact with the ground may occur. As well as rough trails and unimproved trails that require technical skills. Jumps and drops are intended to be less than 61 cm (24").

For complete ASTM guidelines, and additional product safety information, please visit [problemsolversbike.com/safety](http://problemsolversbike.com/safety)

### PARTS INCLUDED

12 or 15 mm Thru-Axle to QR Front Hub Adapter

### TOOLS

Grease

### INSTALLATION

1. Apply a light film of grease on the axle adapter.
2. Insert the 12 or 15 mm Thru-Axle to QR Front Hub Adapter into the thru-axle front hub.
3. Install the wheel into the fork's dropouts and secure the quick-release per the quick-release manufacturer's instructions.

**⚠ WARNING:** After assembly make ensure the wheel spins freely in the fork and there is no lateral movement in the hub.

### ONGOING MAINTENANCE

Periodically check to make sure the front wheel is fully secure.

**⚠ WARNING:** A wheel attachment device that is not properly secured can allow the wheel to loosen or come off, suddenly stop the wheel, decrease your control, and cause you to fall.

### WARRANTY PROCESS

If you and your shop think your Problem Solvers product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

For complete warranty information, visit [problemsolversbike.com/safety](http://problemsolversbike.com/safety)

